




23001 Industrial Blvd, Rogers, MN 55374 / 1-866-527-7637  
www.motoalliance.com

## DENALI Polyurethane Wear Bar

WB72\_Poly

### Kit Contents:

Part #	Qty	Description
1	1	1" Polyurethane Wear Bar
2	8	3/8 x 1.5" Serrated Flange Bolt
3	8	3/8" Serrated Flange Nut

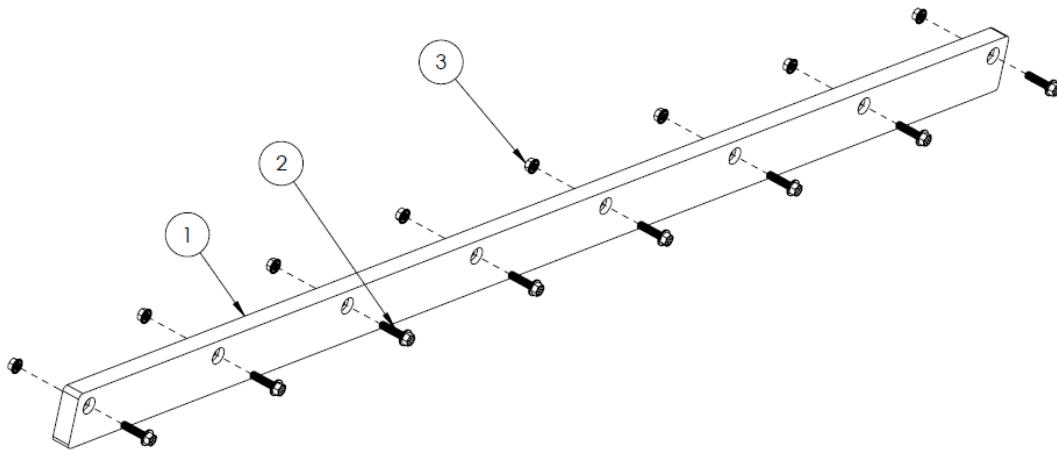

Install the Urethane Wear Bar (#1) to the bottom of the Plow Blade using the 3/8 x 1.5" Serrated Flange Bolts (#2) and 3/8" Serrated Flange Nuts (#3) included in the Polyurethane Wear Bar kit.